

JB-1 Quick Start Guide

To Jam:

1. Turn power on
2. Connect BNC to Master Timecode Generator
3. Wait for green sync LED to flash, indicating JB-1 is jammed
4. Disconnect Master Timecode Generator from BNC
5. Connect BNC to device requiring Timecode input

TC BNC

Timecode In/Out

Power/Menu Button

Power

- Press to turn on
- Hold 6 sec to turn off

Menu

- Hold 2 sec: Unlock menu
- Click: Display menu (when unlocked)
- Click: Scroll down (in menu)
- Hold 1 sec: Select current menu item
- No press for 10 secs: Menu locks

Display


(see other side)

USB Charging LED

- Charging
- Fully Charged

Sync LED

- 1/sec. JB-1 is Synced
- 2/sec. Synced & Battery is low
- 3/sec. Synced & Battery is dead

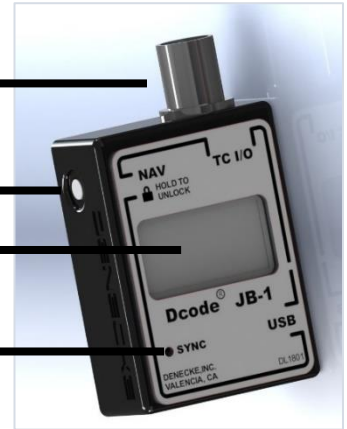

Micro USB


Charges battery and allows updates.

DENECKE, INC., 25209 Avenue Tibbitts, Valencia, CA 91355
(661)607-0206 www.denecke.com email: info@denecke.com

Menu Structure

- POWER OFF
 - ◆ TURN POWER OFF, CANCEL, EXIT
- MODE
 - ◆ AUTO JAM ONCE, JAM ONCE, CANCEL, EXIT
- TC SETUP
 - ◆ FRAME RATE
 - 30, 29.970, 25, 24, 23.976, 30 DF, 29.970 DF, CANCEL, EXIT
 - ◆ TC OUTPUT LEVEL
 - 0 dB (2.00V), -6 dB (1.00V), -12 dB (0.50V), -22 dB (0.16V), -26 dB (0.10V), -46 dB (0.01V), USER-A (0.00V), USER-B (0.00V), CHANGE USER-A, CHANGE USER-B, CANCEL, EXIT
 - ◆ UB ROLLOVER
 - UB FIELD 1, UB FIELD 2, UB FIELD 3, UB FIELD 4, NO UB ROLLOVER, CANCEL, EXIT
 - ◆ CANCEL
 - ◆ EXIT
- FLIP DISPLAY
- BACKLIGHT TIMER
 - ◆ 10 SECONDS, 30 SECONDS, 1 MINUTE, 10 MINUTES, NO TIMEOUT, CANCEL, EXIT
- REPROGRAM
 - ◆ FACTORY DEFAULT, START USB, CANCEL
- ABOUT
- HELP
- EXIT

Display

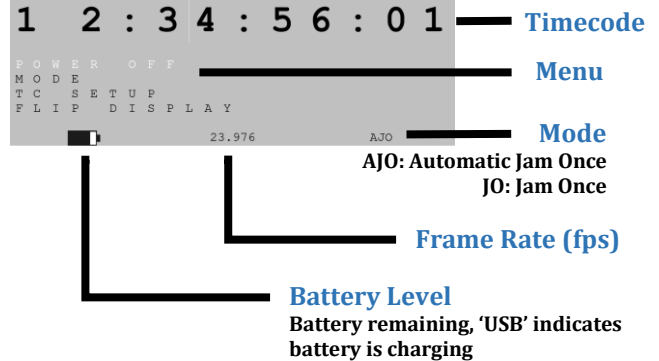

To download the full User's Manual, please visit our website (<http://www.denecke.com/support/support.html>) or scan the QR Code in the JB-1 (under the Help menu).



DENECKE, INC., 25209 Avenue Tibbitts, Valencia, CA 91355
(661)607-0206 www.denecke.com email: info@denecke.com

